



ISO 9001 CERTIFIED COMPANY

Radiator Stop Leak

Part #: 41196

325 mL (11 FL OZ)

Radiator Stop Leak

Rislone® Radiator Stop Leak Sealer is specially designed to stop minor cooling system leaks and drips caused by normal cooling system wear and age.

Works with ALL Types and Colours of Antifreeze Coolant and / or Water

Stops & Seals Coolant Leaks

Seals Leaks in Radiators, Gaskets, Heater Cores & Freeze Plugs

DANGER: Opening the cooling system while the engine is hot or running may cause severe burns.

NOTE: Cooling systems that are dirty or partially clogged should be flushed before usage.

Protect from freezing.

INSTRUCTIONS:

Shake well. Pour Stop Leak into a cool radiator. If direct access to radiator is not available, install in overflow / reservoir tank. Fill radiator and overflow tank to proper level and reinstall cap. Drive / idle engine for 15 to 30 minutes. If leak continues, a second application may be required, or mechanical attention is needed. Leave Rislone in the cooling system for continued protection.

DOSAGE:

Passenger cars and light trucks—Use one bottle for 6 & 8 cylinders and half bottle for 4 cylinder engines. Small engines or other small systems use approximately 20 mL per liter of fluid capacity.

Over the road and heavy-duty equipment—Install one bottle for every 15 liters of coolant capacity.

